

TECH TIP

HUDY HARDWARE BOX LOCKING LEDGE



If the lid of the internal compartment does not click and close, please open the lid and gently push the locking ledge a few times as shown in the illustration photo. Then try to close the lid again. If it still does not close properly, repeat the process.

