

EXCLUSIVE PROFESSIONAL

# HUDY STAR-BOX

## INSTRUCTION MANUAL




### #104414 CONVERSION FOR XRAY RX8



Using these steps – along with the steps in the starter box manual (not shown here) – to set up the starter box for the XRAY RX8.

## STARTER SPRING CHANGE

Remove the front cover.

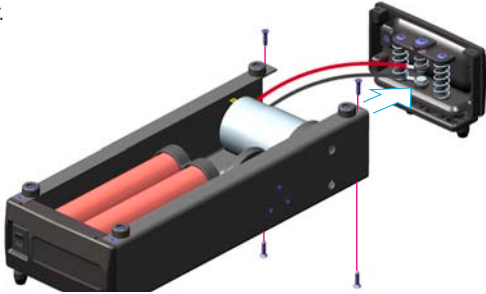


Loosen the screw and remove the composite spring holder, remove spring and replace it with new one from upgrade package and put back the composite spring holder and tighten the screw again.

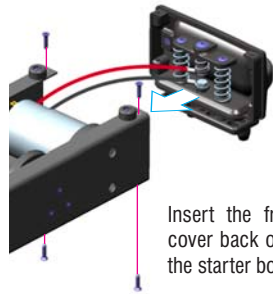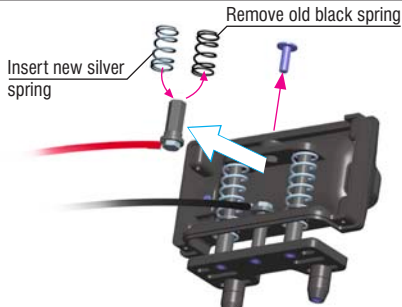


Insert the front cover back onto the starter box.

Install bracket plate posts using M3x20 screws and M3 nuts. Do not tighten the screws fully; they will be set later.

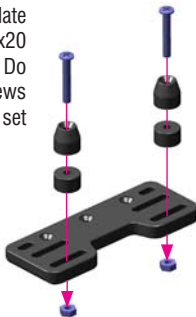


Reattach the rear chassis bracket plate.

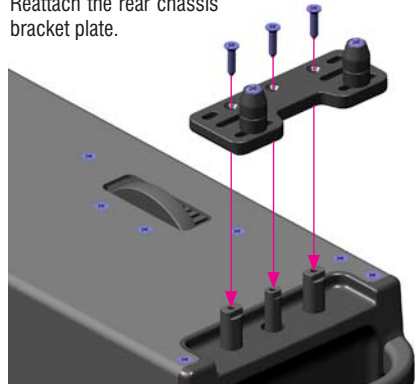



## CHASSIS BRACKETS

### Alternative D

Install bracket plate posts using M3x14 screws as shown.

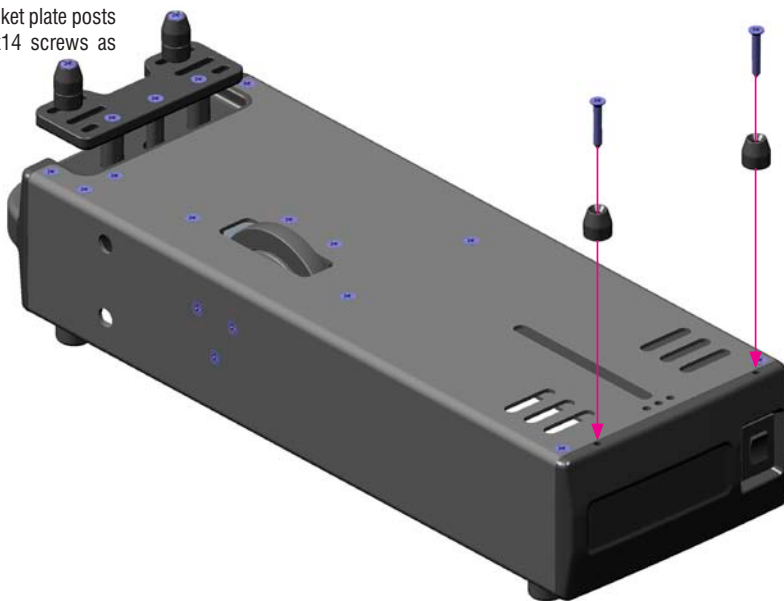

Before placing the car on the Star-Box, operate the Star-Box to ensure the starter wheel spins in the proper direction. Place the XRAY RX8 on the Star-Box so that the engine flywheel aligns with the starter wheel. If the car does not fit the back-stop properly, adjust the stops accordingly.

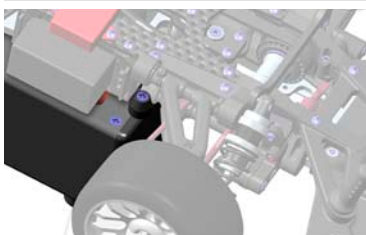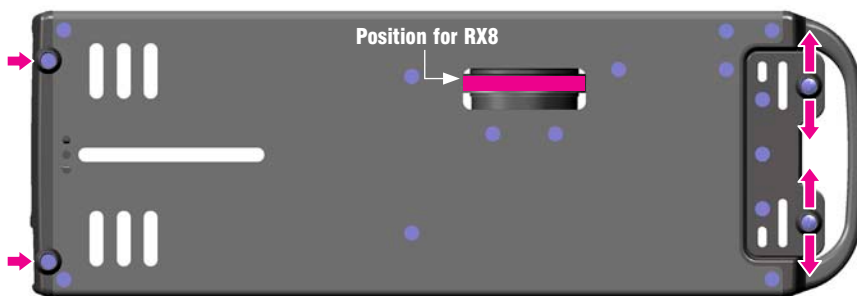

DETAILS